




# Sony Alpha NEX-6 Back Case Replacement

This guide helps with the removal of the back case on a Sony Alpha NEX-6 camera. This is useful in case the back case is damaged or access to the internal components is needed.

Written By: Clayton Dale

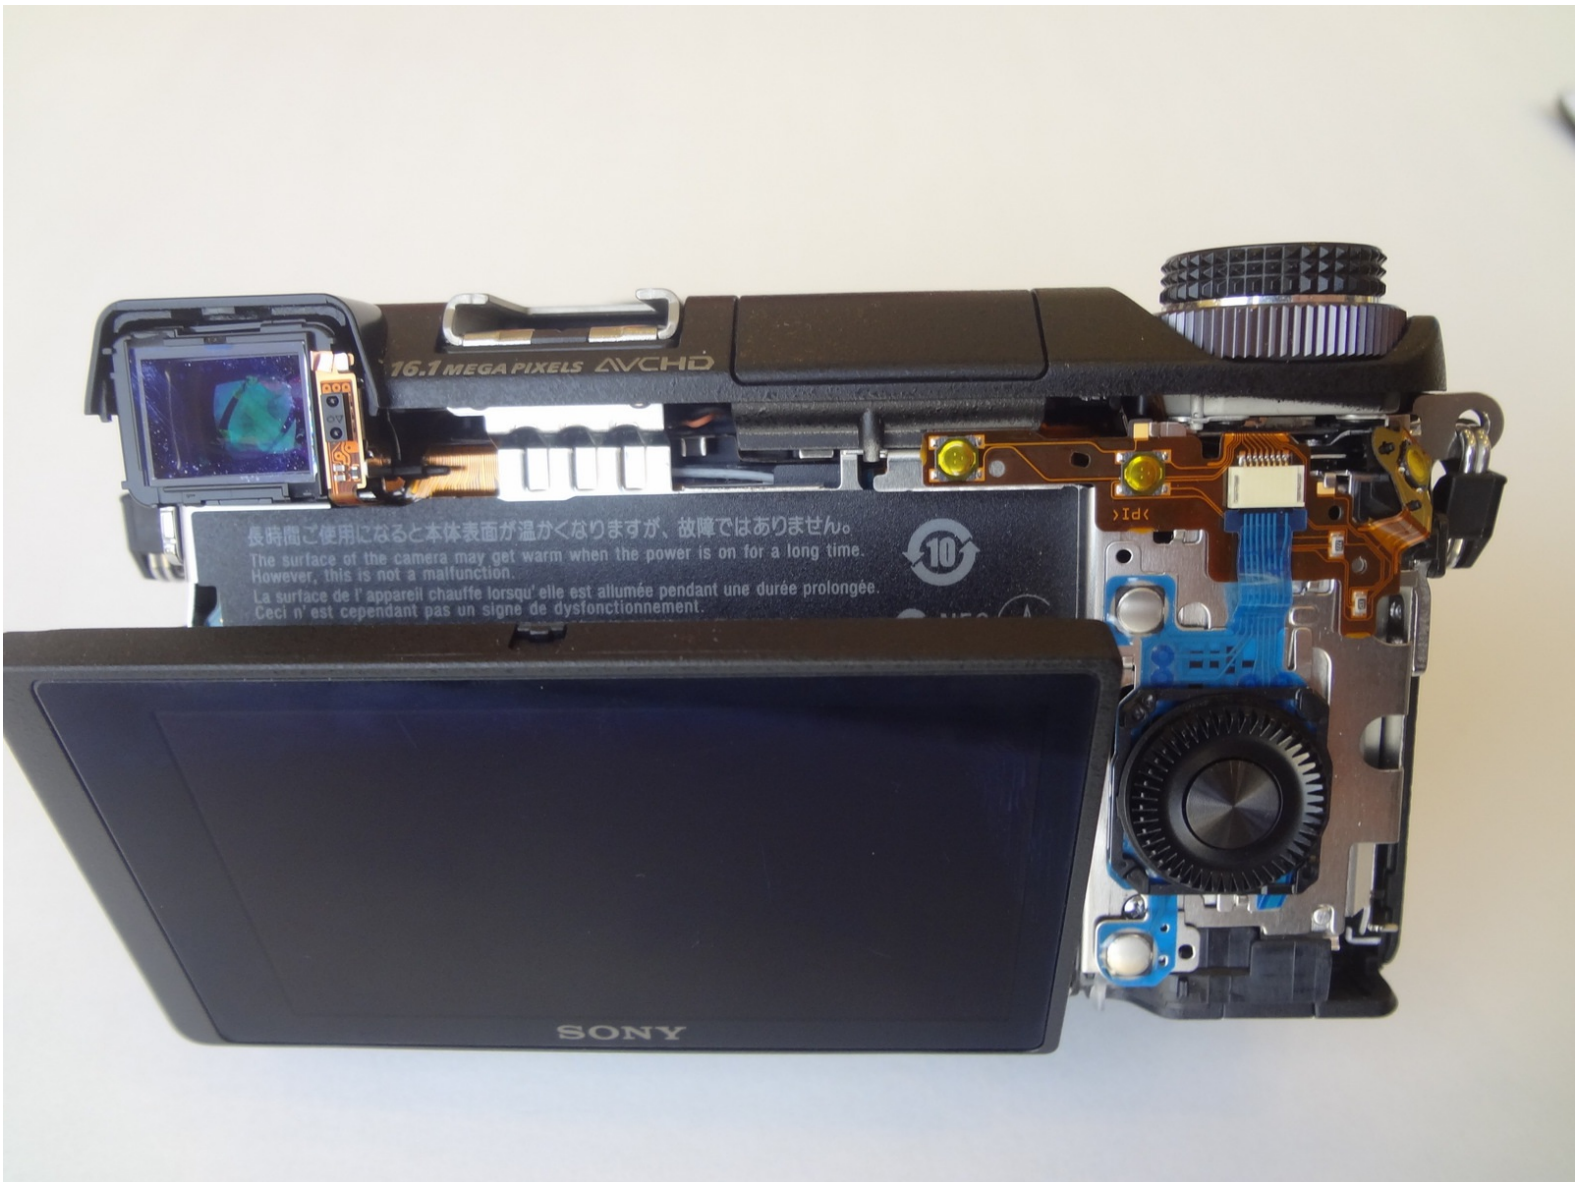

## INTRODUCTION

This guide includes screws removal and a procedure for removing the back case. Follow the steps precisely to avoid breaking of plastic locking tabs.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



**⚠** Prior to operating on this device, be sure the camera is turned **OFF**. With power, the camera can be a dangerous device to work with.

- Turn the camera off by switching the power knob "OFF" text to the white selector dot.


## Step 2



- Flip the camera upside-down and carefully place it on a flat surface.
- With the lens facing outward, locate the battery compartment - indicated by a grooved latch.
- Push the latch to the right to unlock the battery compartment. The door should flip upward.



### Step 3

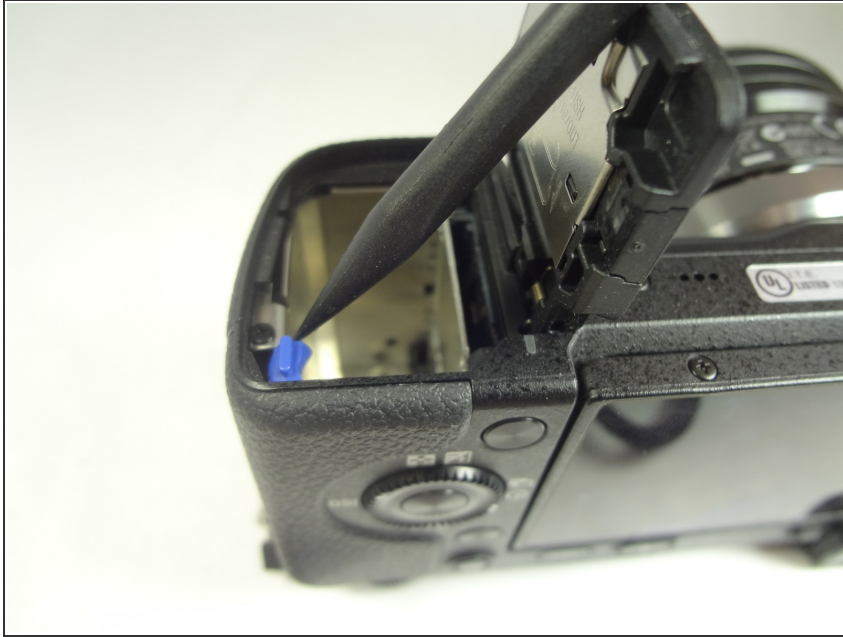

- With the compartment open, locate a blue tab shown with spudger
- Press the tab to the side (to the left, or toward the camera wall). This will eject the camera battery.

### Step 4 — Battery compartment screws



- Remove the two 3.5mm Phillips #00 screws that hold the back case - located inside the battery compartment.

## Step 5 — Bottom screws




- Remove the two 3.5mm Phillips #00 screws that hold the back case - located on the bottom of the camera.

## Step 6 — Side screws



- Remove the 3.5 mm Phillips #00 screw on the side of camera - located between the charging and HDMI ports.
- Remove the 4.0 mm Phillips #00 screw on the side of the camera - located next to the WiFi sign.

## Step 7 — Dis-attaching procedure

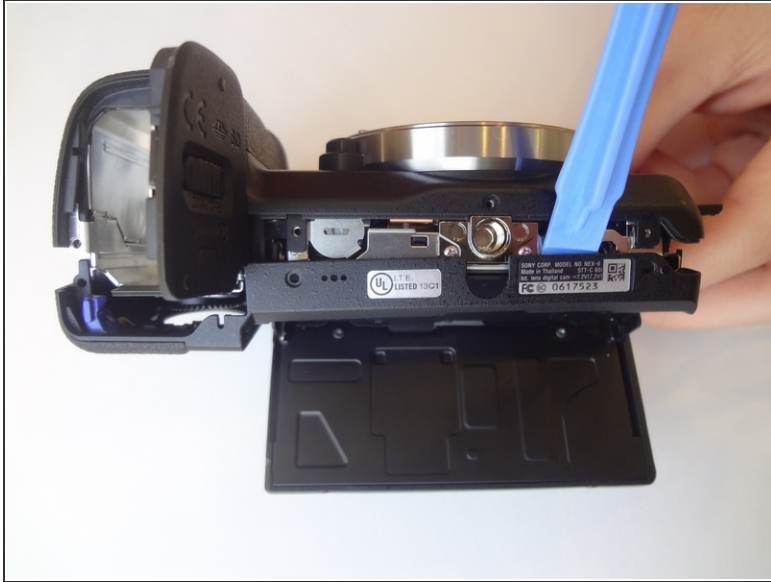

- Starting with the battery compartment gently begin to separate the back case front the camera.
- Using a plastic opening tool, separate the bottom of the back case from the camera. Then proceed by separating the sides.
- Gently lift the back case away from the camera an slide it down to completely remove the back case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-17 03:39:48 PM.